


WARNING!

USE THE SILICONE GREASE BEFORE CONNECTING EGTS CABLE TO EMITTER



THE EGTS CABLE FEMALE CONNECTOR DOES NOT COME WITH THE LUBRICATING SILICONE. PLEASE FIND THE SILICONE GREASE PACKET AND LUBRICATE THE CONNECTOR AS SHOWN.

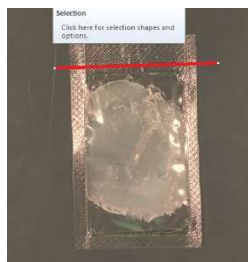

CUT THE SILICONE PACKET WHERE MARKED.



OPEN THE SILICONE PACKET AND PUT SILICONE GREASE INSIDE OF THE EGTS CONNECTOR.



ALIGN THE ARROW & PUSH IN. SOMETIMES, IT MIGHT TIGHT, REQUIRES HARD PUSH IN.

SOME MIGHT HAVE ARROW ON THE OTHER SIDE OF THE EMITTER. ENSURE VISUALLY CHECK THE ALIGNMENT.



DUE TO THE CERAMIC FLANGE BASE RADIUS, THERE COULD BE SMALL GAP.

00005009

WARNING!

USE THE SILICONE GREASE BEFORE CONNECTING EGTS CABLE TO EMITTER



THE EGTS CABLE FEMALE CONNECTOR DOES NOT COME WITH THE LUBRICATING SILICONE. PLEASE FIND THE SILICONE GREASE PACKET AND LUBRICATE THE CONNECTOR AS SHOWN.



CUT THE SILICONE PACKET WHERE MARKED.



OPEN THE SILICONE PACKET AND PUT SILICONE GREASE INSIDE OF THE EGTS CONNECTOR.



ALIGN THE ARROW & PUSH IN. SOMETIMES, IT MIGHT TIGHT, REQUIRES HARD PUSH IN.

SOME MIGHT HAVE ARROW ON THE OTHER SIDE OF THE EMITTER. ENSURE VISUALLY CHECK THE ALIGNMENT.



DUE TO THE CERAMIC FLANGE BASE RADIUS, THERE COULD BE SMALL GAP.

00005009