

LampHolder Lamp Compression Seal Field Retrofit Instructions



CAUTION! Never Expose Eyes or Skin to UV-C – Turn off power to RLM Xtreme system prior to entering plenum. Read all materials before starting.

The Lamp Compression Seal is designed as a retrofit for the LampHolder compression “prongs”. Field replacement can be completed using the following steps:

1. Using “snips” or a similar tool, remove remaining LampHolder prongs (Photos 1 & 2) as close to the base as possible (Photo 3).

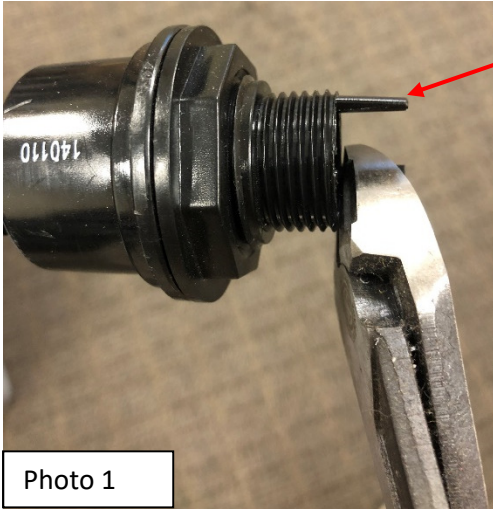


Photo 1

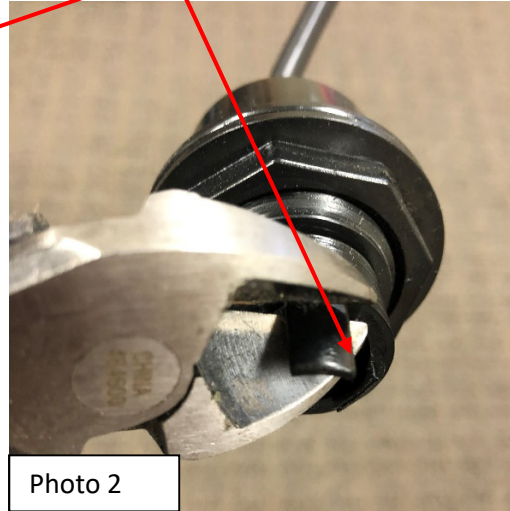


Photo 2


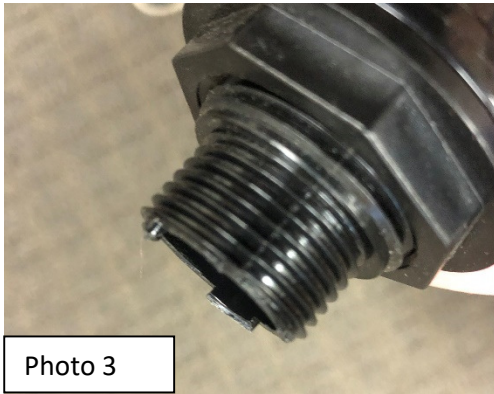



Photo 3

2. Slide LampHolder Compression Nut and Lamp Compression Seal onto lamp as shown (note direction Lamp Compression Seal relative lamps 4-pins);

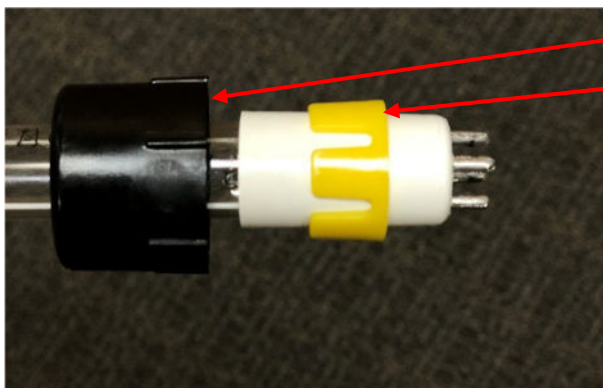


- Lamp Compression Nut
- Lamp Compression Seal

3. Aligning lamp's 4-pins with socket, insert lamp into LampHolder

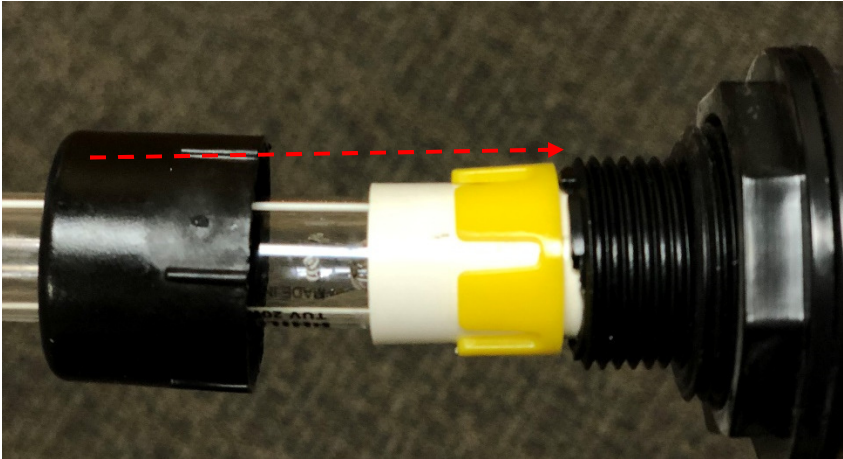

4. Slide Compression Nut and Lamp Compression Seal to base of lamp against LampHolder and firmly twist Compression Nut clockwise until tight (do not use tools). Retrofit complete.

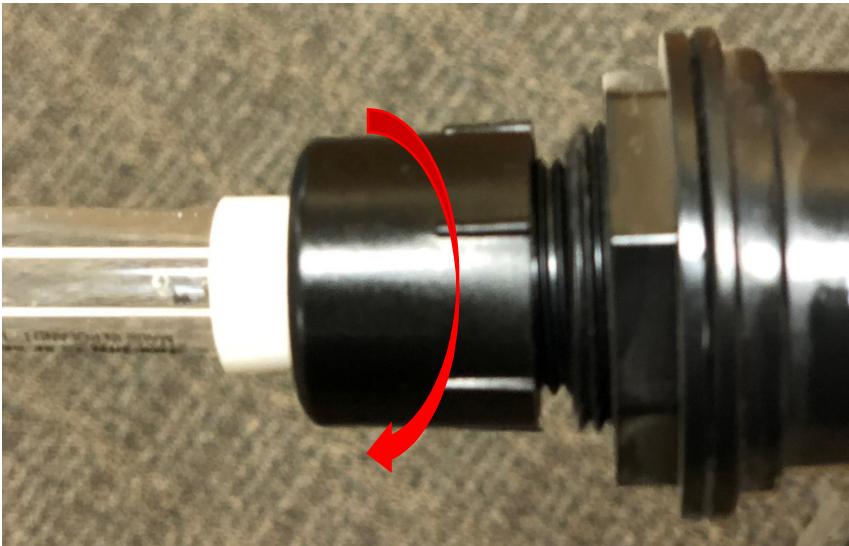

UV Resources™
P.O. Box 800370 • Santa Clarita • California • 91380
(877) 884-4822 • Fax: (877) 794.1294

www.UVResources.com

Specifications subject to change without notice - Copyright 2019, all rights reserved.