

RLM XTREME LAMPHOLDER SPLICE INSTRUCTIONS




Step 1




CUT LAMPHOLDER OFF OF OLD LOOM AT BASE

Step 2

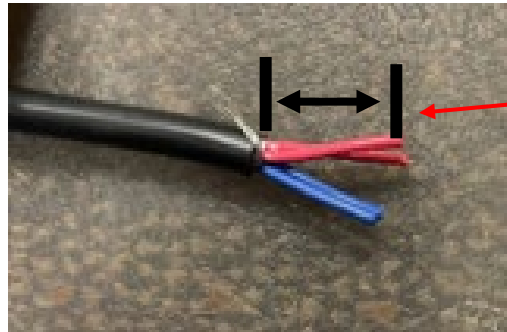

STRIP BLACK LOOM JACKET 7/8"

Step 3

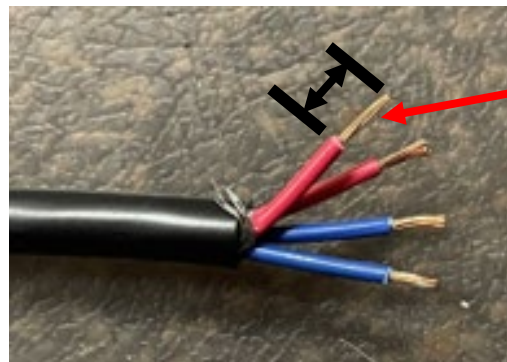

STRIP BLUE & RED WIRE INSULATION 1/4"

RLM XTREME LAMPHOLDER SPLICE INSTRUCTIONS

Step 4



REMOVE "BODY" TO EXPOSE "CONNECTOR"




Step 5



SLIDE SEALING NUT, SEAL AND BODY ONTO OLD LOOM

Step 6

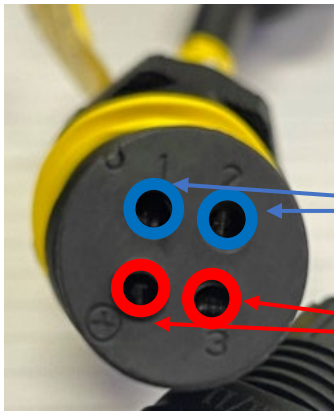


INSERT BLUE AND RED WIRE INTO CONNECTOR WIRE PORTS

NOTE: 4 WIRE PORTS:

1 & 2 – BLUE LOOM WIRES

3 & GRND – RED LOOM WIRES

Step 7

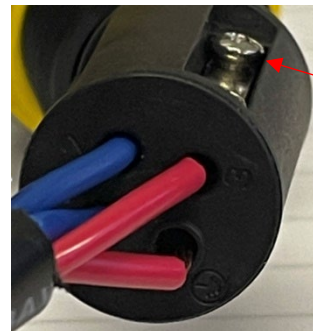

1. ONCE WIRE IS INSERTED INTO PORTS
2. TIGHTEN SCREW

Step 8



1. TIGHTEN BODY, SEAL AND SEALING NUT TOGETHER
2. REINSTALL LAMPHOLDER AND INSERT LAMP