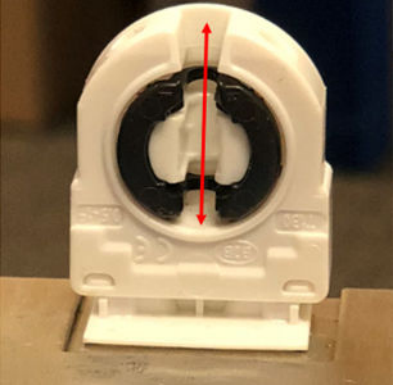
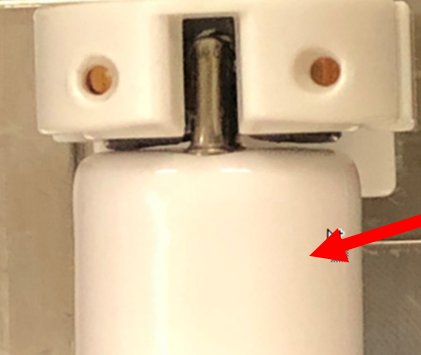
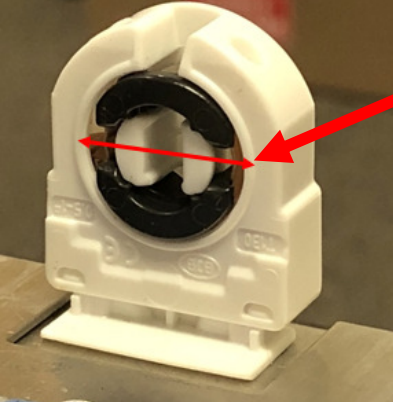
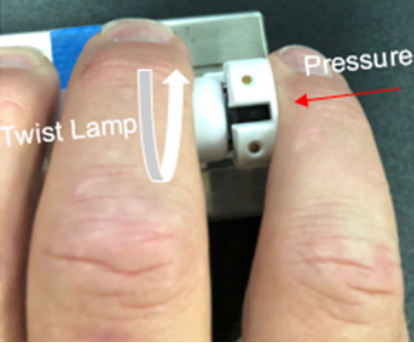


Proper Installation of DEF Lamps into Fixtures

<p>Tombstone in vertical position ready for lamp pin insertion</p> 	<p>Be sure the “black” center ring inside the Tombstone is in a vertical position ready for lamp insertion</p>
 <p>Lamp end cap</p>	<p>Insert the pins of the lamp straight down into the Tombstone on each end of the fixture (as shown)</p>
<p>Tombstone in horizontal position, correct position when lamp is installed and twisted</p> 	<p>Holding the newly inserted lamp by both lamp end caps, rotate entire lamp a quarter (1/4) turn. The lamp pins will now be in a Horizontal position as shown in the picture to the left.</p>
	<p>Lastly, and most importantly, press BOTH Tombstones towards lamp base to close any potential gap.</p>