




MagnaClamp™

APPLICATION INSTRUCTIONS

The MagnaClamp™ is designed to facilitate “simple”, non-invasive, yet extremely effective field installations of the RLM and RLM Xtreme products - in most any HVACR application.

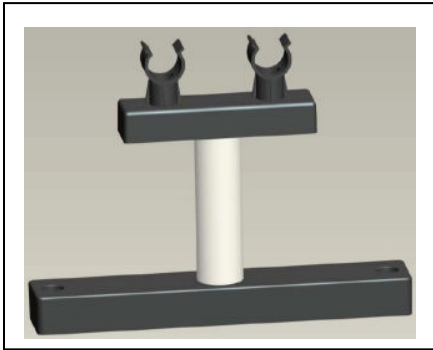

Parts Included:

1. Magnetic Base;
2. Dual LampHolder™;
3. 24” - 1/2” PVC Pipe;
4. Optional Mounting Screws

Directions for Use:

1. Determine preferred “lamp” mounting locations (e.g. plenum wall, coil frame, etc.) and distance from “target” surfaces (e.g. coil). Consider plenum ceilings as options as well.
2. Cut pipe to required length (add Elbows and/or Tee’s as needed – Not included);
3. Glue (not included – see recommendations*) all parts to the magnetic base and LampHolder™ - allow time for glue to cure;
4. Place MagnaClamp™ and lamp at preferred locations (See RLM Xtreme™ IOM for installation details.)
5. While not necessary, two (2) screws are provided with each MagnaClamp to mechanically secure the magnetic base to almost any surface including non-magnetic surfaces, e.g. stainless steel.

***Glue:** There are many glue options for all components; however, two that have been tested are “Plastic Fusion” 2- part epoxy and “Red Hot” PVC pipe glue. Curing time will vary.

